

Coil On Plug Boot Replacement



Assembly removed from vehicle



1- Remove the COP boot by firmly pulling away from the coil.



2 – Remove the old spring conductor from the coil, clockwise rotation of the spring while gently pulling will simplify removal. Some COP boots have the spring as an integral part of the boot and this step will not be necessary.



3 – Install the new spring conductor by pushing onto the coil's terminal. For COP boots with integral spring, install boot in same position as original and move onto step 5.



4 – Slide the new boot over the spring. Check for any alignment tabs on the coil, especially with angled boots, and slide firmly on.



5 – Finished assembly. The use of silicone di-electric grease is highly recommended inside the bottom of the COP boot. This will ease later removal and help keep moisture and damaging contaminants out of the boot.

Article # 20041